


# Installation instructions for: CH507 Models

**This product is ETL listed and suitable only for indoor dry locations and approved for use at any height above the finished floor.**

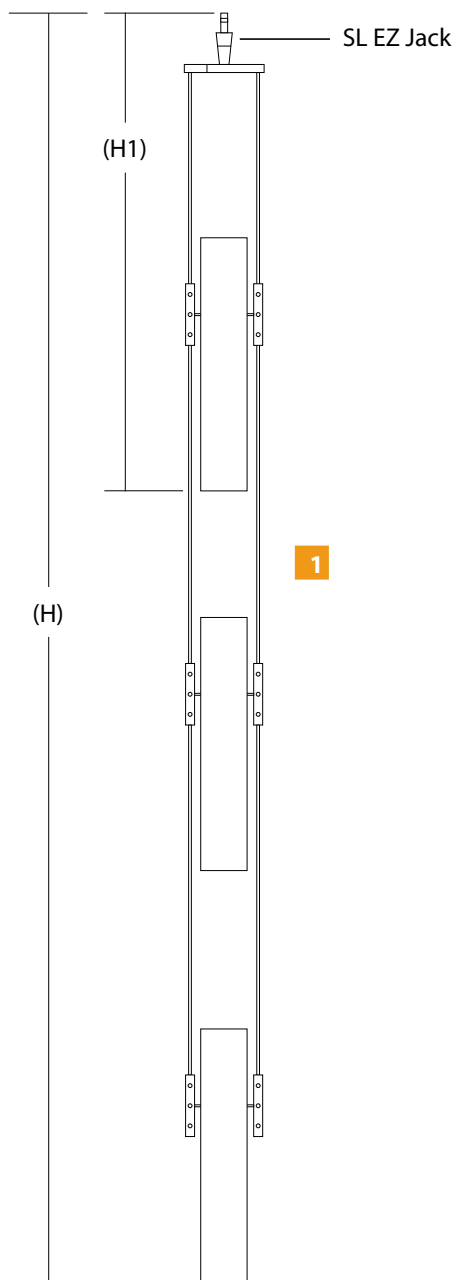


- 1 The overall fixture height (H) is measured from bottom of the bottom glass shade to the end of the fixture EZ Jack. Determine the overall desired fixture height. The height (H1) is from the bottom of the top shade to the end of the fixture EZ Jack and it is 39" inches when the fixture rods are not cut.

- 2 Mark amount (L1) from one end of the fixture rod that needs to be cut shorter. (Optional)




**NOTE:** To avoid interference while relamping do not cut the fixture rods (L1) more than 24" inches.

- 3 Cut the fixture arms with a sharp cutter. (Optional)

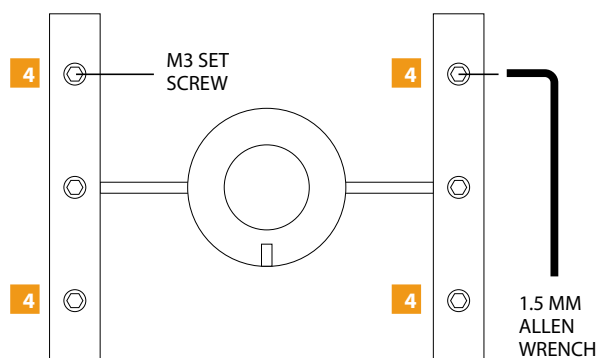


- 4 Loosen (DO NOT REMOVE) the four M3 set screws on the socket assembly rods.

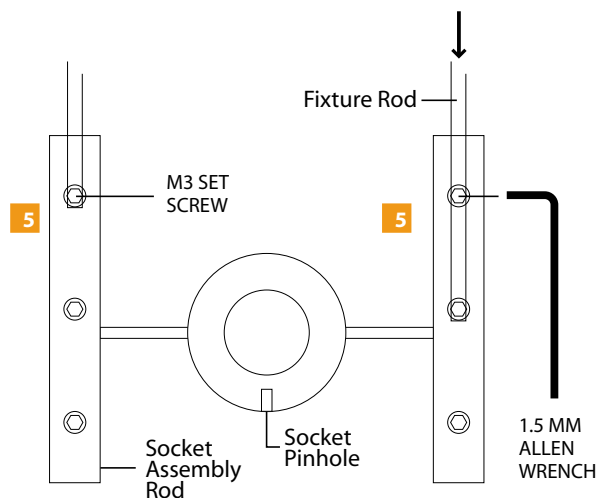


- 5 Insert the two fixture rods on the opposite side of socket pin holes, completely into the socket assembly rod and secure into place by tightening the M3 set screws with the provided 1.5 MM Allen wrench.

# Installation instructions for: CH507 Models


- 6** Loosen (Do Not Remove) the two M3 set screws on the sides of the EZ Jack assembly rod with the provided 1.5 MM Allen Wrench.

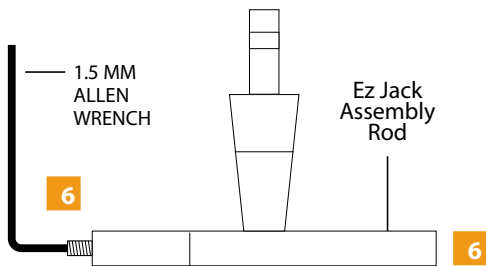


- 7** Insert the fixture rods into the EZ Jack assembly rod, make sure the fixture rods are aligned with the top of the EZ Jack assembly rod. Tighten the two M3 set screw with 1.5 MM Allen wrench.

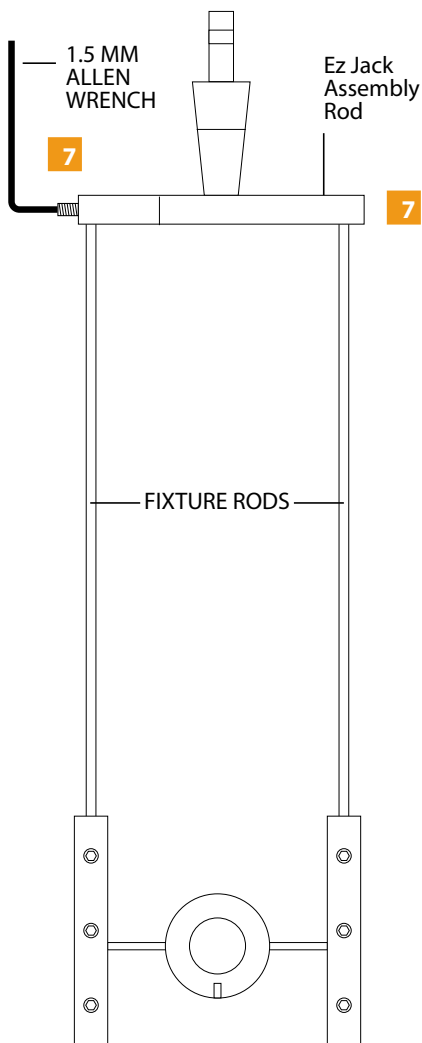

- 8** The height (H2) is measured from bottom of the middle glass shade to the middle of the top socket assembly rods. Determine the desired (H2) fixture height. The height (H2) is 39" inches when the fixture rods are not cut.

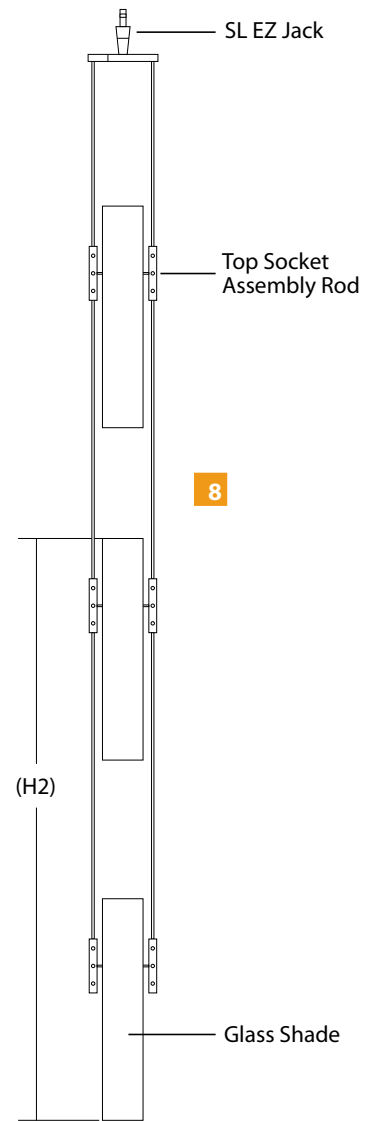

- 9** Mark amount (L2) from one end of the fixture rod that needs to be cut shorter. (Optional)

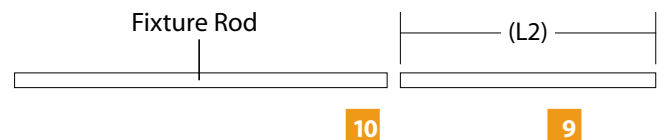


**NOTE:** To avoid interference while relamping do not cut the fixture rods (L1) more than 24" inches.


- 10** Cut the fixture arms with a sharp cutter. (Optional)

# Installation instructions for: CH507 Models

- 11** Insert the fixture rods into the top EZ Jack assembly rods, and tighten the two M3 set screw with 1.5 MM Allen wrench and tighten.

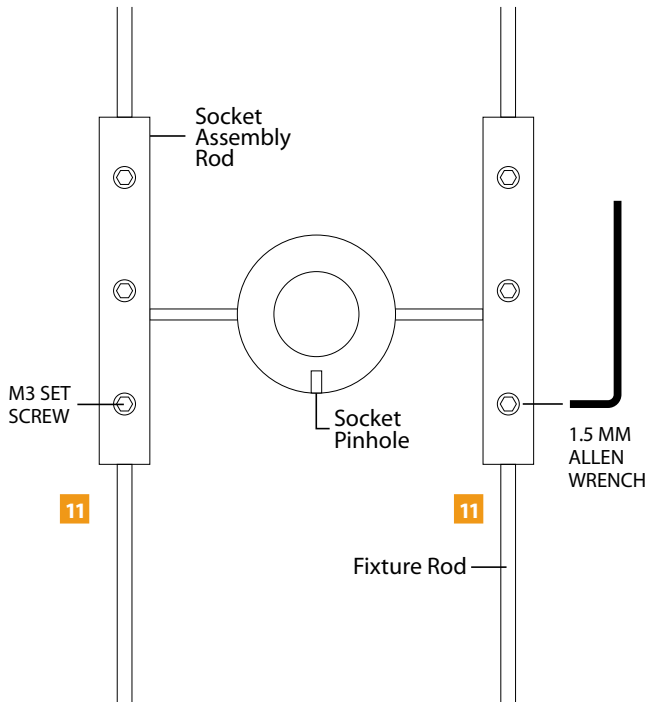


- 12** Loosen (Do Not Remove) the four M3 set screws on the middle socket assembly rods.

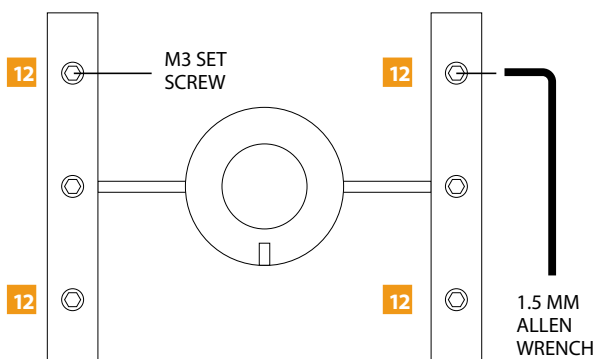

- 12** Insert the EZ Jack assembly rods from the end opposing the socket pin holes onto the fixture rods. Make sure that middle EZ Jack assembly rods are in line with the top EZ Jack assembly rods and tighten the two M3 set screws with the 1.5 MM Allen wrench.


- 13** Repeat steps 8 through 13 to install the bottom fixture.

## INSTALL THE LAMP

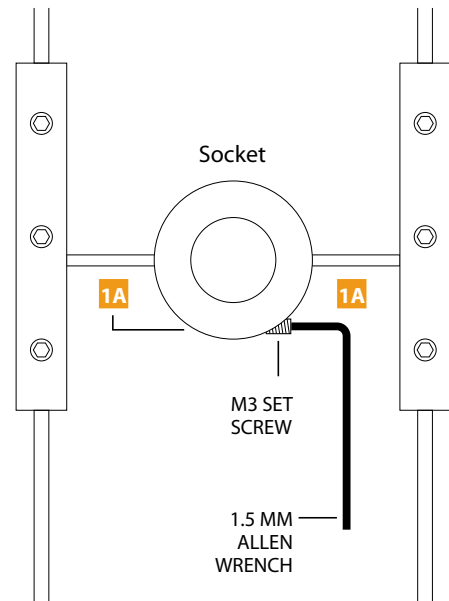

**NOTE:** To reduce the risk of a burn or electric shock during relamping, disconnect the power to the fixture.

- 1A** For each socket, loosen (Do Not Remove) the two M3 sets screw with the 1.5 MM Allen wrench.

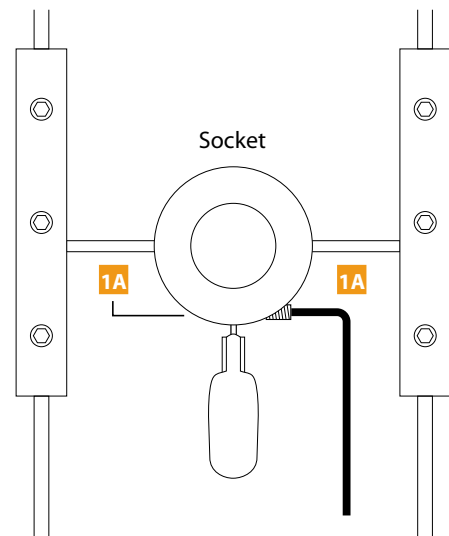


- 2A** Push the lamp pins completely into the socket holes and tighten the two M3 set screws with the 1.5 MM Allen wrench to secure lamp in place.

**NOTE:** Use only your fingers and soft cloth to replace the lamp.  
Use MAX 35 Watt, Type Xelogen (Xenon) Bi-Pin Lamp, With Each Socket

# Installation instructions for: CH507 Models

## INSTALL THE GLASS

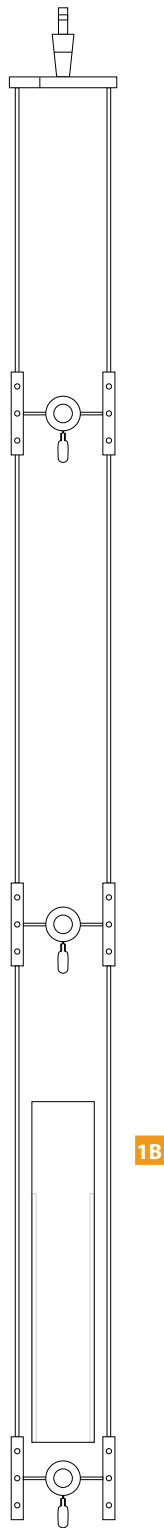

- 1B** From between the fixture rods, carefully place a glass shade onto each socket assembly.