



- 1 Unscrew glass to expose mounting screws.
- 2 Unscrew mounting screws.
- 3 Detach universal Cross bar.
- 4 Using wire nuts connect the hot and neutral 120Vac to the black and white wires of the fixture, also connect the ground wire to Jbox.
- 5 Secure the universal cross bar to the Jbox.

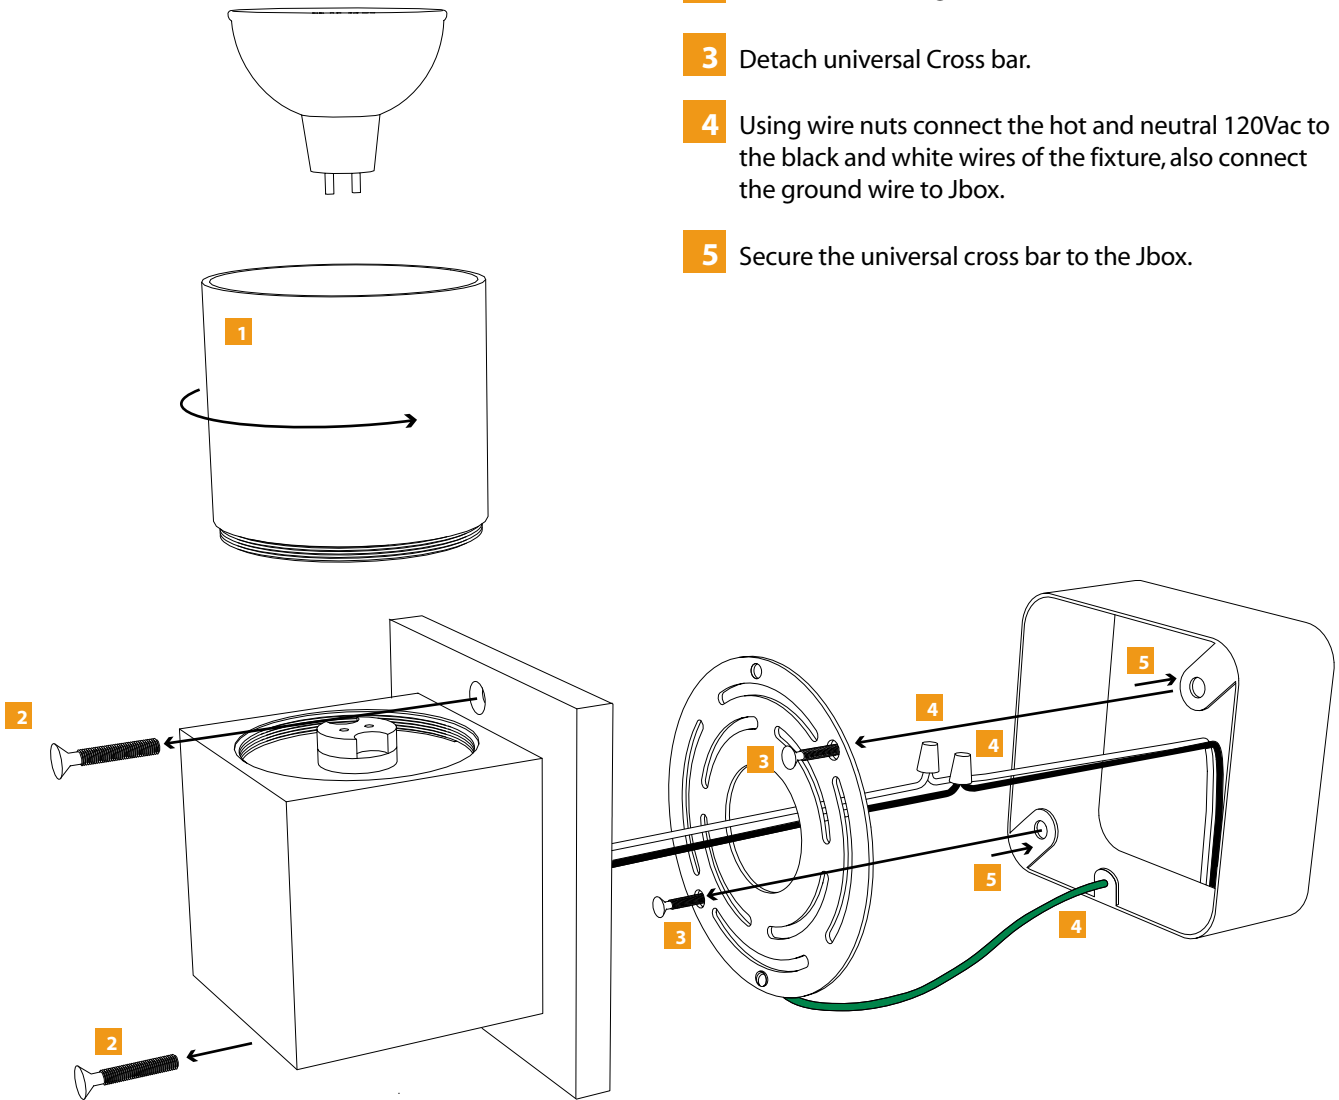

# Installation instructions for: WS0130P


**6** Attach universal Cross Bar with two short screws (included).

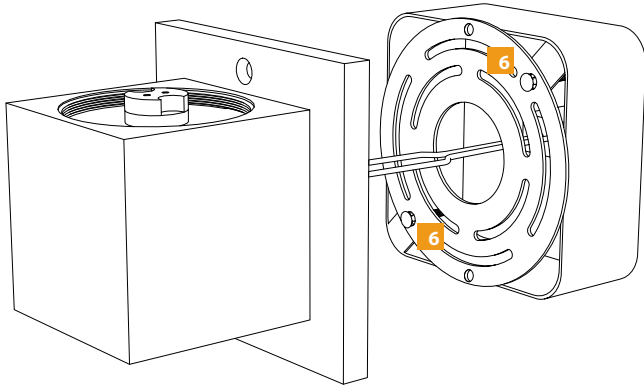


**7** Orient Cross Bar with holes at 0° and 180° degrees.

**8** Mount fixture with screws that were originally obscured by glass upon unpacking.


**9** Tighten body till snug

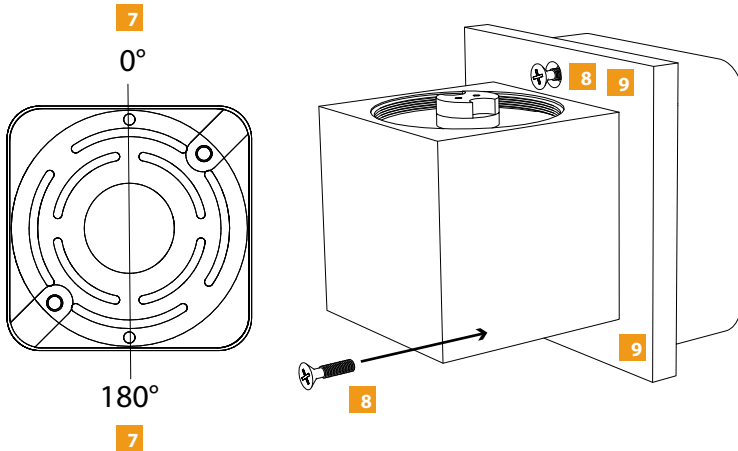


**10** **IMPORTANT:**  
**BULBS TO BE INSERTED INTO GLASS END AND BULB PINS SEATED COMPLETELY INTO LAMPHOLDER BEFORE SCREWING GLASS BACK IN PLACE.**

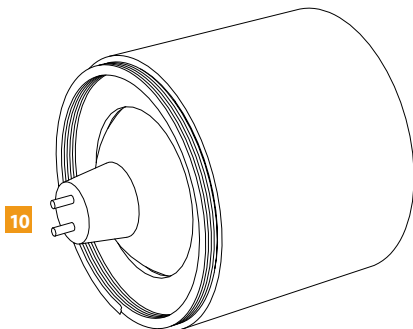

**11** Install the diffuser over the bulb, be careful not to cross thread.

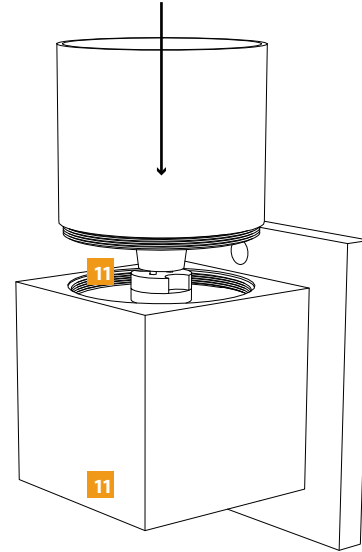

**12** Gently screw glass back in clockwise until fully seated.

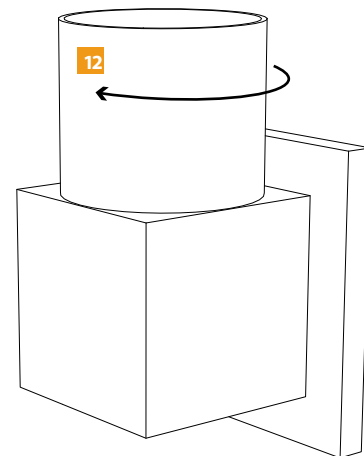

**13** Power Luminaire.

SAVE THIS INSTRUCTIONS