




## INSTALLATION VIDEO:


Scan this QR Code or visit:  
<https://tinyurl.com/ejinstall>  
for a video installation tutorial.




This product is ETL listed and suitable only for indoor dry locations and approved for use at any height above the finished floor.

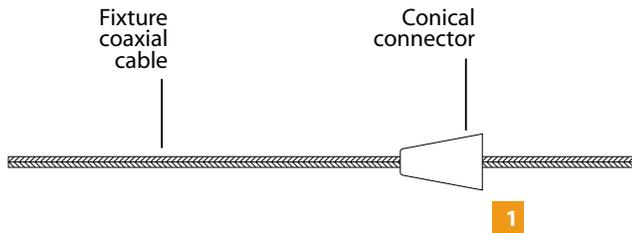


- 1 Insert the fixture coaxial cable through the conical connector

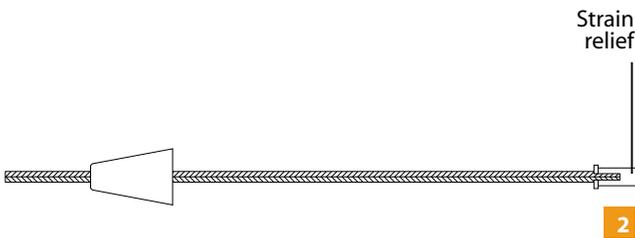


- 2 Insert the coaxial cable through the flared end of the strain relief.

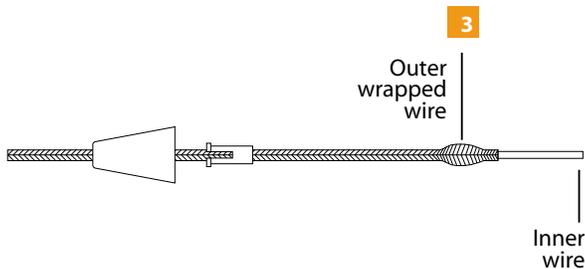


- 3 Slide the outer wrapped wire back to expose the inner wire.

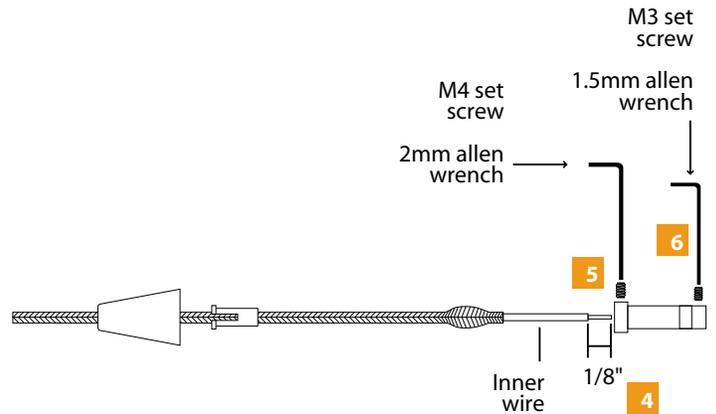


- 4 Strip 1/8" from end of the inner wire. Make sure that the stripped portion is not greater than 3/16".
- 5 Loosen (Do Not Remove) the M4 set screw with the provided 2mm Allen wrench.
- 6 Remove the M3 set screw with the provided 1.5mm Allen wrench.

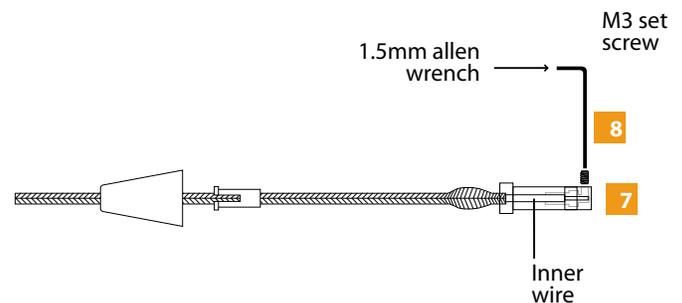

- 7 While inserting the inner wire into the connector look through the set screw hole to make sure that the stripped portion of the inner wire contacts end of the connector.
- 8 Hold the coaxial cable in place; replace and tighten the M3 set screw with the 1.5MM Allen wrench. Lightly tug on the coaxial cable to make sure that the set screw connection is tight.

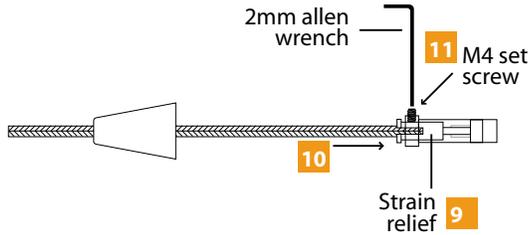

- 9** The strain relief slots should be rotated 90° away from the M4 set screw.
- 10** Slide and push the strain relief completely into the connector. This will force the outer wrapped wire to be inserted into the connector.
- 11** Tighten the M4 set screw with the 2mm allen wrench so that the strain relief holds the outer wrapped wire in place.

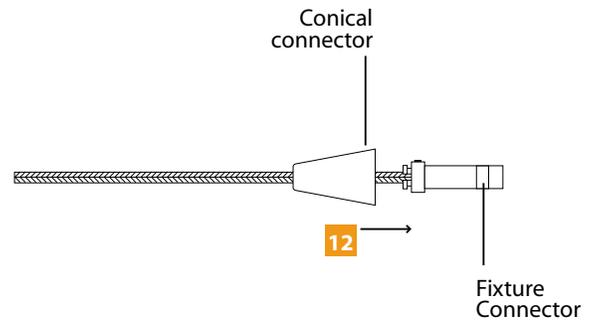

- 12** Slide the conical connector over the fixture connector.  
To install the fixture, refer to the instructions provided with the system.

## SAVE THESE INSTRUCTIONS

**WARNING: RISK OF FIRE**  
**Never replace a Xenon (Xelogen) lamp with a regular Halogen lamp. A regular Halogen lamp requires a protective glass shield.**

## TROUBLESHOOTING:

### Single pendant will not illuminate:

- 1** Remove jack from pendant cord
- 2** Ensure inner wire is stripped no longer than 1/8"
- 3** Ensure outer jacket strands are tidy according to video procedure, and strain relief is installed correctly

### Multi-light canopy rhythmic flashing:

#### Brief flashing indicates a short, often in the EZ Jack. To locate:

- 1** Remove all pendants from canopy
- 2** Turn canopy power **on**
- 3** Select one port. Test each fixture in selected port, one by one. **Test all fixtures** to eliminate all possible shorts.
- 4** Any fixture that does not illuminate is the culprit. Swap the bulb with a known working one and retest.
- 5** If fixture fails again, review installation video and reinstall jack.