



Installation instructions for 2" Electrical Box (CPEJRN2-MSJBOXRM2)

Note: Minimum volume of the electrical box must be 6 in³ (98 cm³)

A INSTALLATION FOR A NEW CONSTRUCTION

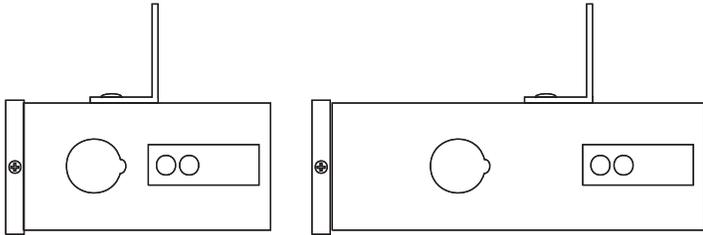

1 Select the location for the 2" electrical box.

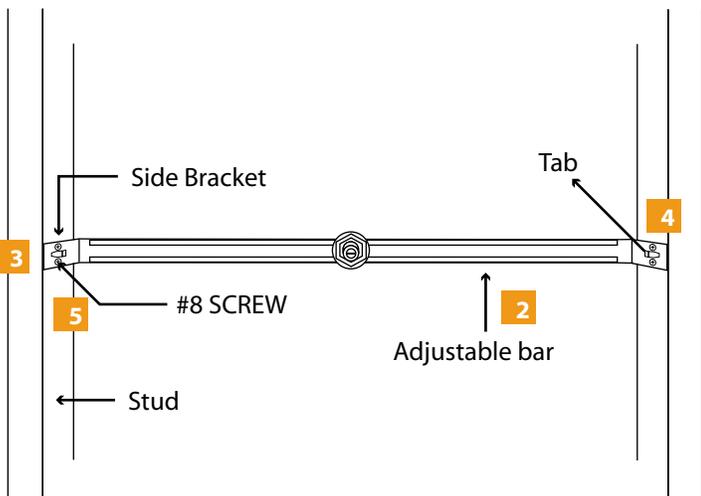


2 Place the adjustable bar between the studs.

3 Line up the front edge of the side brackets with front edge of the studs.

4 Hammer the tabs on side brackets into the studs to hold the adjustable bar.

5 Secure the adjustable bar into the studs with four #8 screws.


6 If mounting the conduit onto back of the 2" electrical box, remove the two #4 screws from the back cover to detach the back cover from the box.

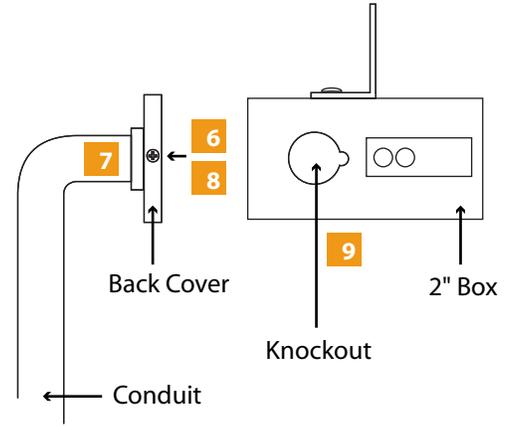

7 Remove the knock out and mount the conduit.

8 Replace the back cover and #4 screws if removed.


9 Conduit can also be mounted on the side knockouts.

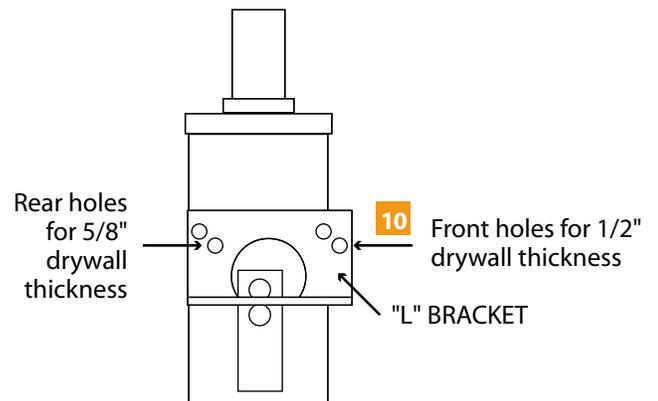


10 For 1/2" drywall thickness mount the "L" bracket on the 2" electrical box by using the two front holes. For 5/8" drywall thickness mount the "L" bracket to the 2" electrical box by using the two rear holes.

Installation instructions for 2" Electrical Box (CPEJRN2-MSJBOXRM2)


- 11** Remove the nut on the adjustable bar and place the "L" bracket onto the nipple. Tighten the nut to secure the 2" electrical box.
- 12** Loosen the flat head screw on the adjustable bar and slide the 2" electrical box to the desired position. Tighten the flat head screw to secure the 2" box in position.
- 13** Remove the four #6 screws on the front of the 2" electrical box.
- 14** Mark a 1-13/16" square on the drywall where the 2" electrical box is going to be located.
- 15** Cut out the marked square with a sharp knife and install the drywall.

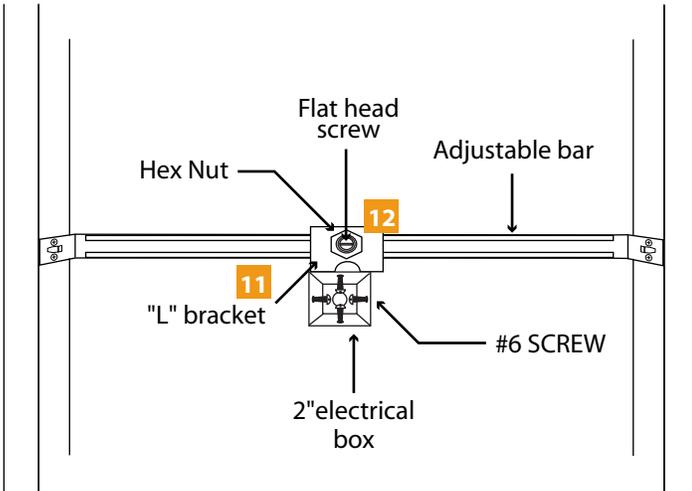

- 16** After installing the drywall, place the dressing plate on the 2" electrical box. The dressing plate should cover the plaster or open spaces around the 2" electrical box.

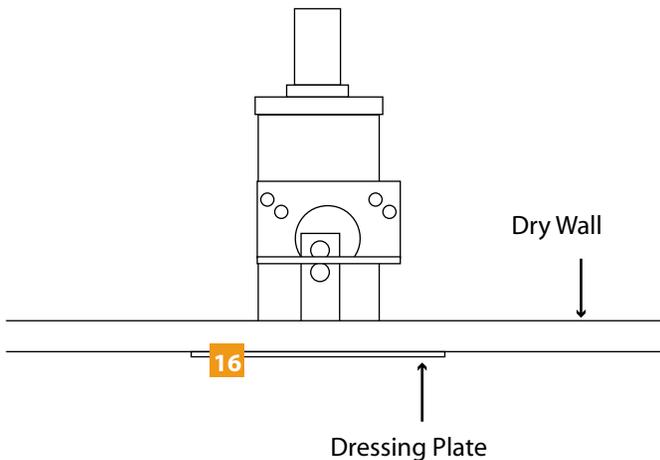


- 17** Replace and tighten two #6 screws on opposing sides of the 2" electrical box so that the spring tabs on the side of the 2" electrical box push out against the drywall and secure the box in place.

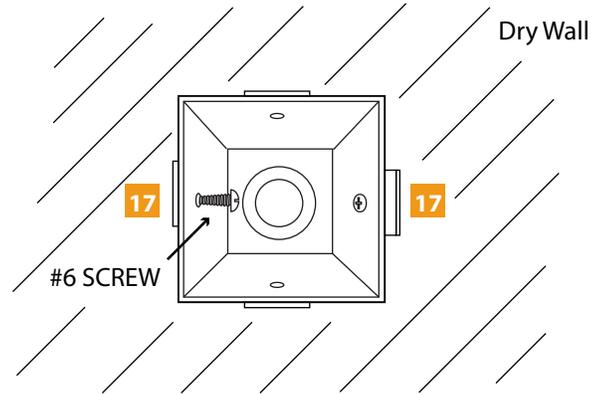


Installation instructions for 2" Electrical Box (CPEJRN2-MSJBOXRM2)

Note: "L" bracket and adjustable bar are not used for retrofit installations.

B INSTALLATION FOR RETROFIT

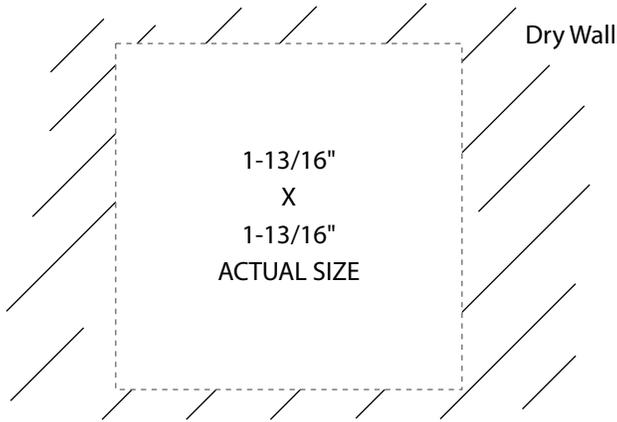


- 1 Mark a 1-13/16" square on the drywall where the 2" electrical box is going to be located. The drawing above can be used as a template.
- 2 Cut out the marked square with a sharp knife.

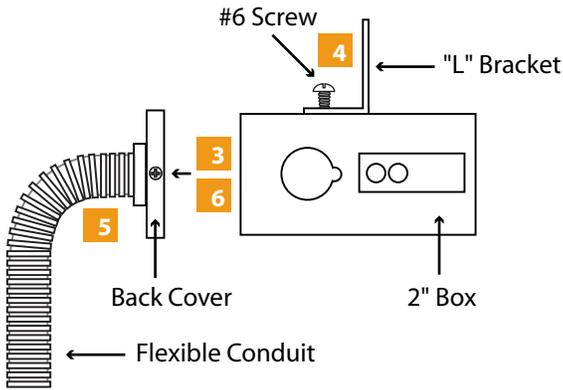


- 3 Loosen the two #4 screws on the back cover. Remove the back cover.
- 4 Remove the two #6 screws on the "L" bracket. Remove the "L" bracket.
- 5 Remove the knockout from the back cover and mount the flexible conduit.
- 6 Replace the back cover and #4 screws on the 2" electrical box.

- 7 Remove the four #6 screws on the front of the 2" electrical box.

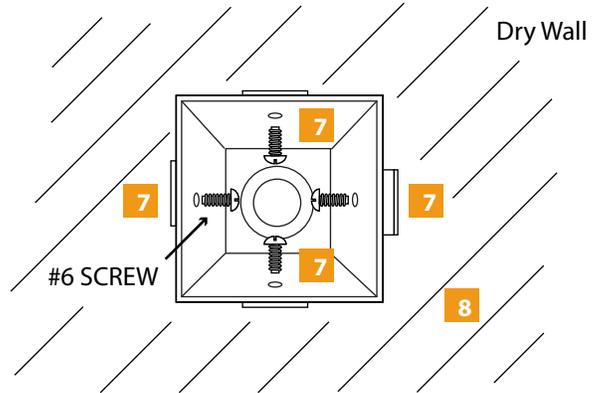

- 8 Place the 2" electrical box into the square cut out.
- 9 Replace and tighten two #6 screws on opposing sides of the 2" electrical box so that the spring tabs on the side of the 2" electrical box push out against the drywall and secure the box in place.

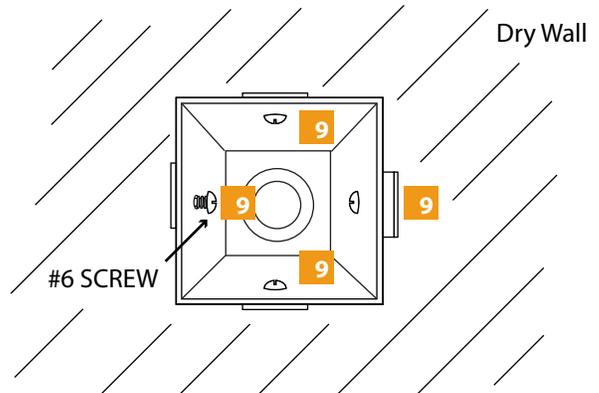

SAVE THESE INSTRUCTIONS